




RHINO-RACK

S604 Tie Down Eye Nuts

Important: Please read these instructions carefully prior to installation. Please refer to your fitting instruction to ensure that the bracket is installed in the correct locations. Check the contents of kit before commencing fitment and report any discrepancies. Place these instructions in the vehicle's glove box after installation is complete.

Parts List

| Item | Component Name | Qty. | Part No. |
|------|---------------------|------|----------|
| 1 | M8 Eye Nut | 2 | C079 |
| 2 | M8 HDPE Flat Washer | 2 | W060 |
| 3 | M8 x 16mm T-Bolt | 2 | B222 |
| 4 | Fitting Instruction | 1 | R580 |

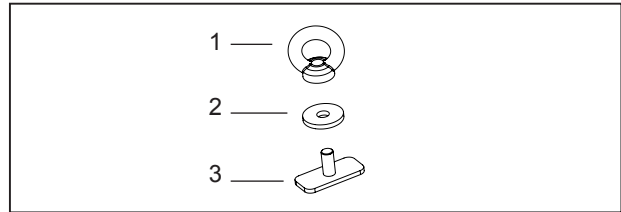

1 Slide and locate bolt in the cross bar.

2 Locate bolt on cross bar. Place a flat washer and turn eye nut onto the end of each bolt. Tighten with the shank of a screwdriver. For secure tie off points ensure the eye nut hole faces the front and rear of the vehicle.

3 Cut buffer strip to suit and place in cross bar.

Rhino-Rack
 3 Pike Street, Rydalmere,
 NSW 2116, Australia.
 (Ph) (02) 9638 4744 (Fax) (02) 9638 4822

Document No: R580
 Prepared By: Peter Luu Issue No: 02
 Authorised By: Chris Murty Issue Date: 3/03/2016

These instructions remain the property of Rhino-Rack Australia Pty Ltd and may not be used or changed for any other purpose than intended.