

## REVERSING LIGHT KIT TO SUIT ARB REAR BAR WHEEL CARRIERS

Product number: 5700070

READ FITTING INSTRUCTIONS CAREFULLY BEFORE PROCEEDING



- If already fitted, remove number plate bracket from wheel carrier.
- Fit reversing light to hole in top of number plate bracket as shown.



- Tighten using 17mm socket. (Viewed from underneath.)



- Fit loom through centre of wheel mount as shown. (Viewed from rear of wheel carrier.)




- Allow some slack in cable for fitting to number plate bracket.
- Fit channel with M12 caged nut into wheel mount as per photo.



- Cable tie loom to wheel carrier frame.



- Cable tie to lower frame, through hole, around behind frame and around hub. Cable tie to locking pin bracket so that wire is free to move through opening and closing action.
- Once loom is fastened securely scotch lock to vehicle reversing light wire and earth to body of vehicle.

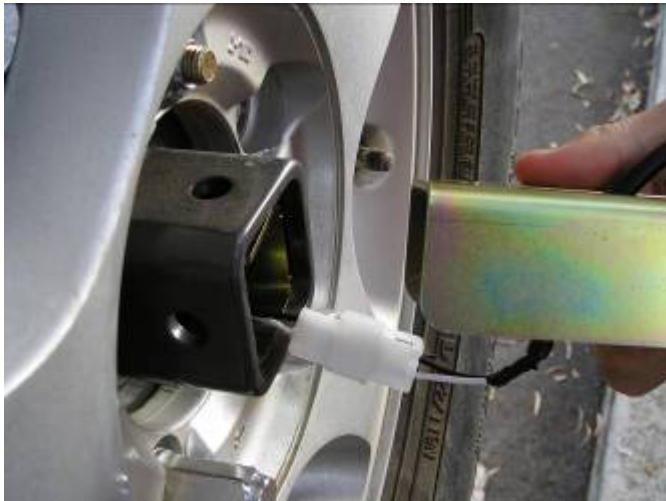

- Connect loom to light as shown and fit number plate bracket to wheel mount.



- Secure using M12 bolt, spring washer and flat washer.
- Finger tighten only.



- When adjusting number plate bracket, be careful not to cut through loom.



- Tighten M12 bolt using 18mm spanner.

